


Maintenance Manual

Kedi drum brake axles

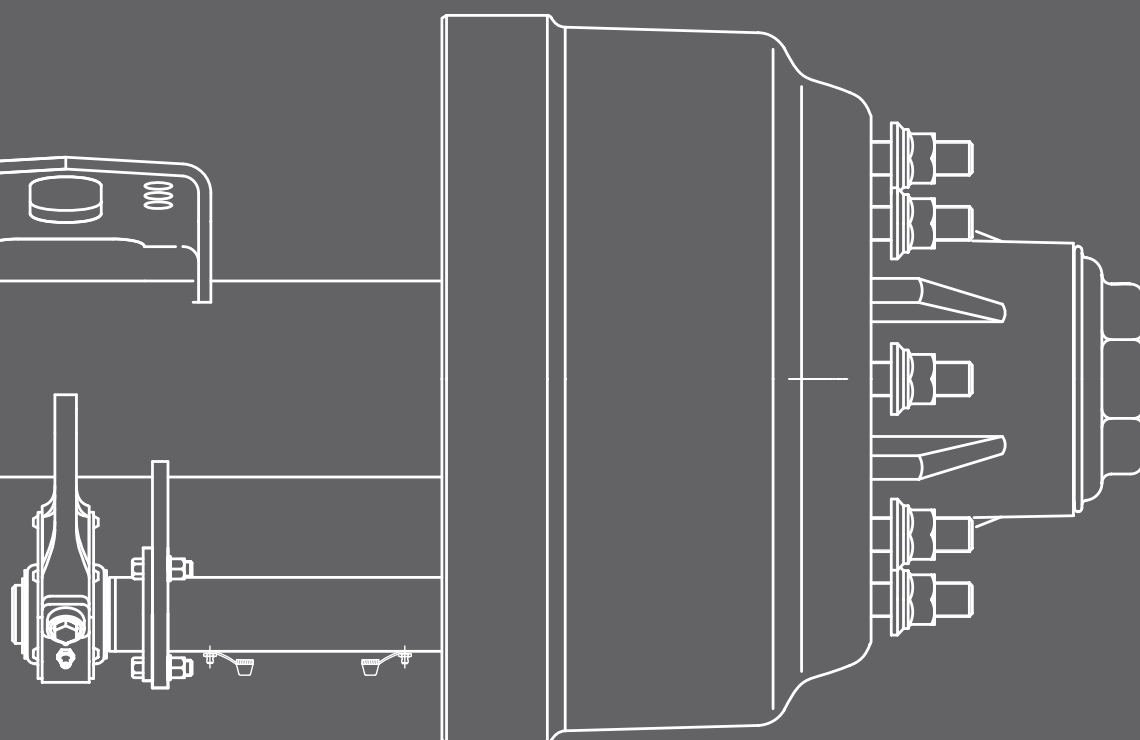

Contents	Page
Warranty.....	2
Product Specifications	2
Axle information.....	3
Axle maintenance and lubrication instructions.....	4-6
Axle maintenance intervals.....	7
KEDI parts list.....	8-9
KEDI replacement kits.....	10-16

Warranty

1 year warranty period from the date of installation. Warranty covers the axle free from defects in material and workmanship under normal use and service.

The warranty is void with respect to any product which has been altered in any way from its manufactured condition, such as intentional modification, accident, corrosion, misuse failure to provide necessary and reasonable maintenance and is exclusive of normal wear.

The sole responsibility of SAF-HOLLAND under this warranty is limited to repairing or replacing at the factory any part or parts which are returned, with transportation charges prepaid, and are found to be defective to the satisfaction of SAF-HOLLAND.

Written authorization from SAF-HOLLAND must be obtained prior to returning any part or parts. No charges for transportation or for labour performed on SAF-HOLLAND products by unauthorized persons will be allowed under this warranty.

SAF-HOLLAND shall not be liable, in any event, for proximate, incidental, consequential or other damages, including but not limited to damages for loss of production or injury to persons or property arising out of any breach of this warranty.


Hubodometer must be fitted to each trailer to ensure warranty is valid. If not fitted the warranty is null and void. 1st 5,000km service must be conducted to ensure warranty is valid. Records will be compared to inspection and preventative maintenance manual to ensure accuracy.

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE EXTENDING BEYOND THAT SET FORTH ABOVE.

SAF-HOLLAND reserves the right, without prior notice, to change specifications and dimensions as designs are altered and/or improved. Options and features other than those shown may be provided.

Product specifications - Axle

- Brake XEM 420x180mm
- Outboard drum
- Brake chambers centres 250mm;
- Brake lining MB21;
- Track 1850mm
- Standard wheel fixing 10x285PCD, M22x1.5 stud; other options 10x335PCD & 5 spoke;
- Beam size 127x16mm;
- Auto slack adjusters 152.5mm (6") - standard (Multi and manual hole optional)
- S-cam tubes - standard
- Bearing HM518445/10
- 4 piece hub nut securing system (procedure attached)
- ABS ready with 100 teeth pole wheel - standard
- Weight: 364 kg
- Parallel Spindle

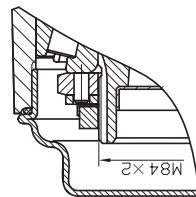3

Axle maintenance

Check the working conditions of the wheel hub bearing

Once every six months, check the working conditions of the wheel hub bearing. When checking, it is necessary to lift the axle to the height where the wheels are lifted from the ground. Use a jack to support the axle against the position near the leaf spring or the crossbeam. Please note that it is necessary to use the steel base plates with a thickness of over 15mm, lift the tires off the ground, insert two prisms between the wheel and the ground, and check whether the bearing can rotate normally (**Figure 1**).

Bearing Clearance Adjustment

Improper bearing clearance adjustment will directly affect the service life of the axle. If the clearance is too small, the bearing will be quickly heated and burnt during operation. If the clearance is too large, contact between the bearing rollers and the inner and outer races will be greatly reduced, and only a small number of rollers bear the full load as a result, inner and outer race ways will be damaged quickly. Therefore, appropriate adjustment of bearing clearance is essential to the use of the axle.

When performing first service after initial driving of 5,000 km, or after every 90,000 kilometres of normal driving, bearing clearance adjustment must be carried out.

Procedure for adjusting bearing clearance and tightening of wheel end nut for Kedi axle

Please refer to the table below and spindle cross section (**Figure 2**).

Figure 1


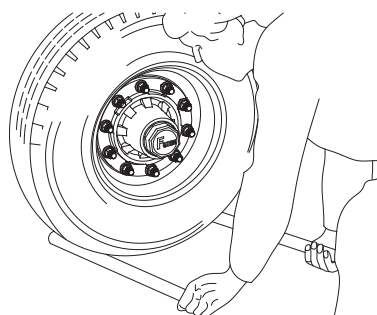


Figure 2

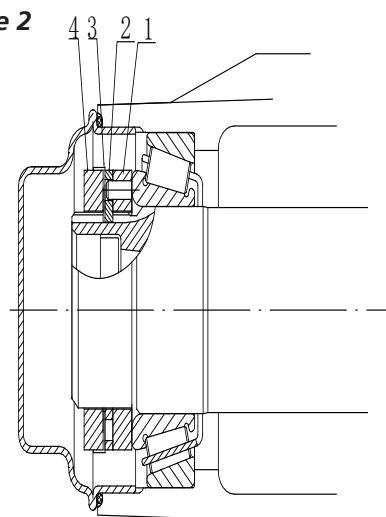

- 1- Adjusting Axle Nut
- 2- Adjusting Washer
- 3- Stop Washer
- 4- Axle Lock Nut

TAPERED ROLLER BEARING ADJUSTMENT PROCEDURE RP-618

Step 1: Lubricate the tapered roller bearing with clean axle lubricant of the same type used in the axle sump or hub assembly.

NOTE: Never use an impact wrench when tightening or loosening lug nuts or bolts during the procedure.

NOTE: Never use an impact wrench when tightening or loosening lag nuts or bolts during the procedure.								
INITIAL ADJUSTING NUT TORQUE	INITIAL BACK OFF	FINAL ADJUSTING NUT TORQUE	BACK OFF		FINAL BACK OFF	JAM NUT TORQUE		ACCEPTABLE END PLAY
			AXLE TYPE	THREADS PER INCH		NUT SIZE	TORQUE SPECIFICATIONS	
STEP 2	STEP 3	STEP 4	STEP 5		STEP 6	STEP 7		STEP 8
200 lbf•ft (271N•m) While Rotating Wheel	One Full Turn	50 lbf•ft (68 N•m) While Rotating Wheels	Steer (Front) Non-Drive	12	1/6 Turn *	Install Cotter Pin to Lock Axle Nut in Position		0.001" - 0.005" (.025 - .127 mm) As Measured Per Procedure With Dial Indicator
				18	1/4 Turn *			
				14				
				18	1/2 Turn *			
			Drive	12	1/4 Turn *	Dowel Type Washer	300-400 lbf•ft (407-542 N•m)	
				16		Tang Type Washer **	200-275 lbf•ft (271-373 N•m)	
			Trailer	12	1/4 Turn *	Less Than		
				16		2 5/8" (66.7mm)	300-400 lbf•ft (407-542 N•m)	
*	If dowel pin and washer (or washer tang and nut flat) are not aligned, remove the washer, turn it over and reinstall. If required, loosen the inner (adjusting) nut just enough for alignment.							
**	Bendable type washer lock only: Secure nuts by bending one wheel nut washer tang over the inner and outer nut. Bend the tangs over the closest flat perpendicular to the tang.							

Axle Lubrication

Brake camshaft bearing

Near the S cam and spline of camshaft, there is camshaft bushing and spherical bearing inside of the camshaft bracket. Add grease to it every three months or 30,000 km and before operation if the trailer has not been in use for an extended period.. Charge with grease until fresh grease can be seen around the greasing nipple and discharging around the cam (**Figure 3**).

Brake slack adjuster

The maximum lubricating interval should not exceed 30,000 kilometres (**Figure 4**).

Replacing wheel hub bearing seal

Inspect and replace the grease and oil seal every 150,000 kilometres, every year, or every time brake lining replacement or bearing reassembly occurs.

When replacing bearing grease, make sure to firstly thoroughly clean the bearing and the sealing element (wash with diesel degreaser), and check whether these parts can be reused. Clean the wheel hub cavity and wheel hub cap cavity, and then fill grease into it. The space between bearing rollers must be fully filled with grease.

1.  If the vehicle is driven under adverse conditions, lubricating frequency should be increased and maintenance interval should be shortened.
2. Composite lithium based grease with a temperature of $-30^{\circ}\sim 180^{\circ}$ should be used. Mobil XHP222 axle grease specifically used by SAF-HOLLAND is recommended.
3. Never mix greases of different brands!

Installation & adjustment of automatic slack adjusters

Brake chambers

- Observe the correct piston rod length "L" as given in figure 5.(250.6mm).
- Install brake chambers as per manufacturers recommendations.
- Grease the camshaft.
- Install the slack adjuster on the camshaft if required.

Figure 3

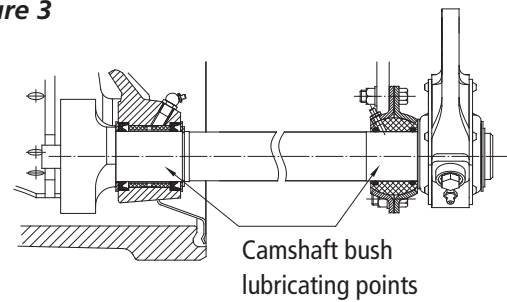


Figure 4



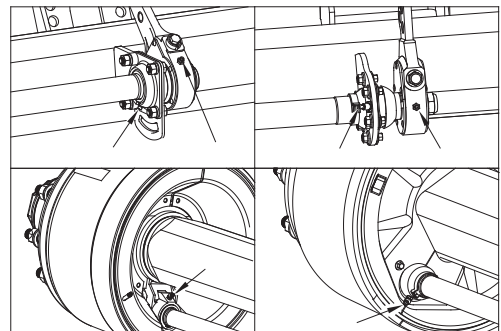


Figure 5

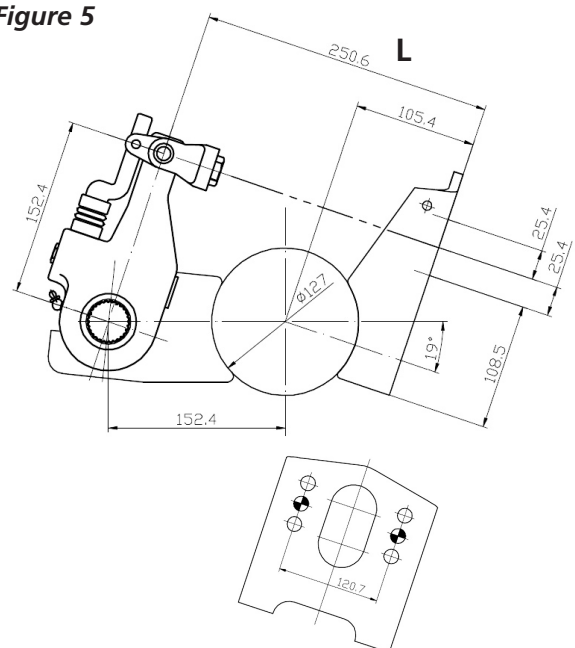

Auto Slack Adjustment Procedure

Step 1

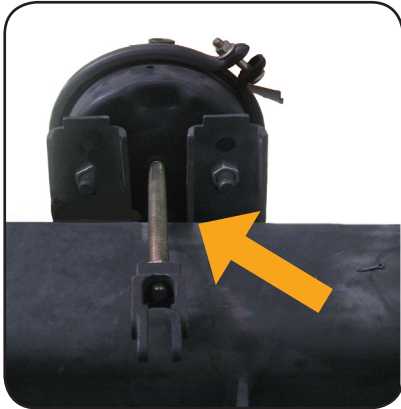


Ensure booster is installed as per manufacturers recommendations

Step 4




Then back off adjusting screw by 3/4 turn.

Step 2

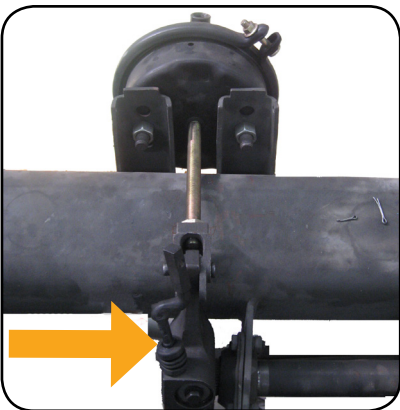

Pull out the rod on the Auto Slack Adjuster.

Step 5

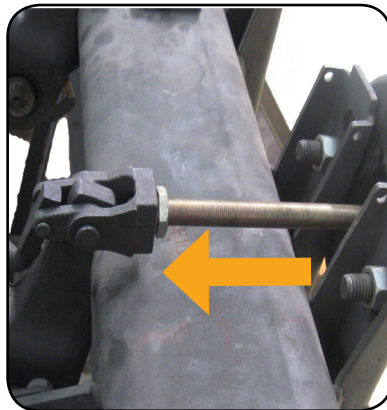

Push in rod and connect to booster clevis

Step 3




Adjust the clearance of the brake lining by turning adjusting screw in a clockwise direction until the brake lining is in contact with the brake drum.

Kedi axle

			PERIODIC CHECK		
MAINTENANCE INTERVALS WHICHEVER COMES FIRST	DISTANCE INTERVALS >	AFTER FIRST 5,000 KM OR	EVERY 30,000KM	EVERY 90,000KM	EVERY 150,000KM
	TIME INTERVALS >	AFTER FIRST MONTH	EVERY 3 MONTHS	EVERY 6 MONTHS	EVERY 12 MONTHS
MECHANICAL CHECK					
Attention: Torque check wheel nuts after the first 50km and 150km to recommended torque setting, also after any removal of the wheel					
Torque check all nuts and bolts to recommended setting		•			•
Check and adjust hub end-float (if required) Check condition of taper roller bearing and replace, if necessary		•	•	•	
Pack wheel bearing with fresh grease after 150,000 km or 12 months, whichever comes first					•
Lubricate camshaft bearings after every brake lining replacement. or if vehicle is returning to operation after an extended period without use (3 months)			•		•
Inspect brake lining and replace if worn past service limit, or are otherwise unserviceable, or damaged*					•

* SAF-HOLLAND recommends replacement of the brake linings every 12 months.

Warranty claims will only be accepted as long as the operating and maintenance instructions have been completed and SAF spare parts have been fitted.

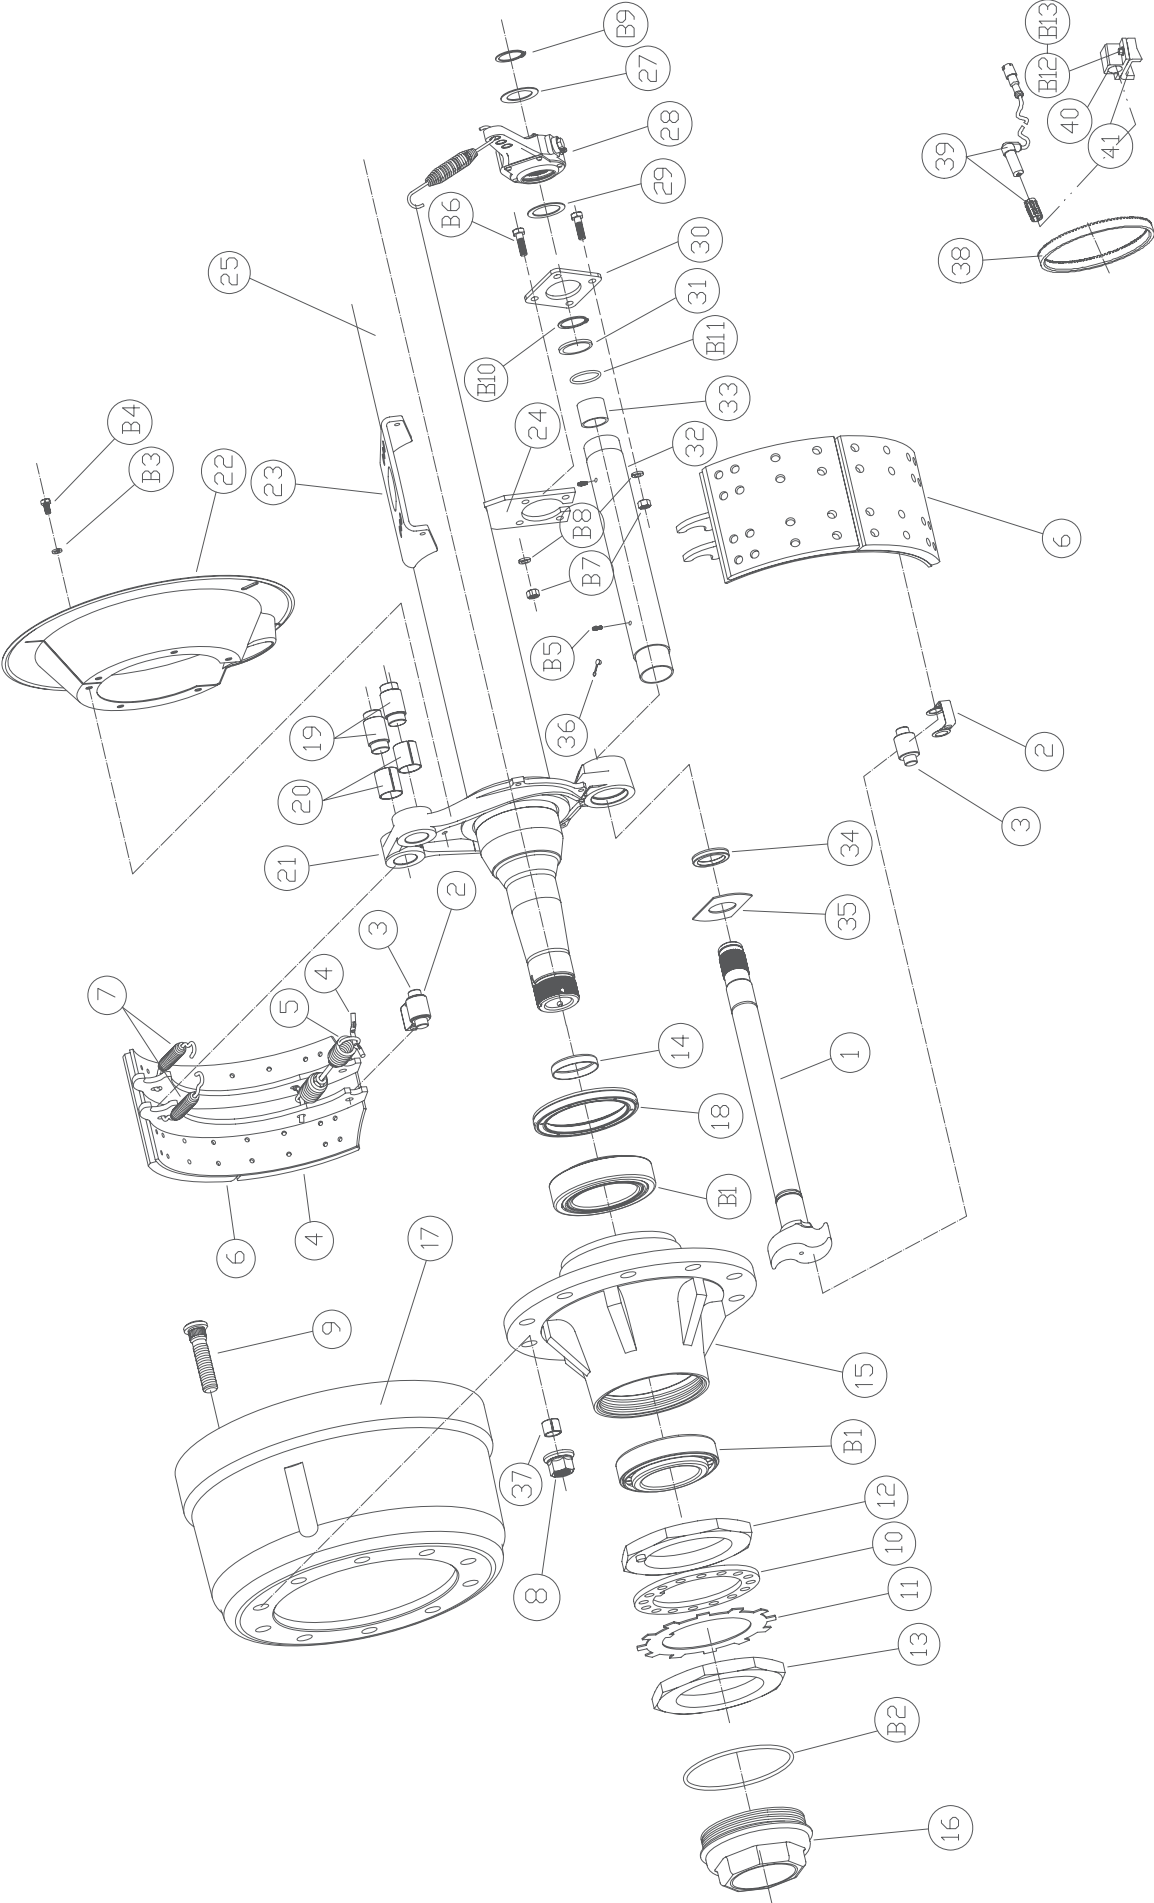


Axle Type	Max capacity	Brake	Stud	PCD	H	Rec. Wheel	Bearing
K1302WYha	13,800	420 x 180	10-M22 x 1.5 ISO	285.75	220	7.5V - 20	HM518445/10

Kedi Parts Listing

Item	Part No.	Qty	Description	Qty per Axle
1	K131011013L	1	Camshaft (10 splines, Left)	2
1	K131011013R	1	Camshaft (10 splines, Right)	2
2	K131020101	1	Retainer Roller	4
3	K131030101	1	Brake Shoe Roller	4
4	K131040101	1	Pin Return Spring	4
5	K131050101	1	Heavy Duty Return Spring	2
6	K131060101K	1	Brake Shoe Assembly 420*180mm (MB21 Carlisle Brake Lining)	4
7	K131070101	1	Anchor Pin Spring	4
8	K131090101	1	Flange Nut M22*1.5	20
9	K131100206	1	Wheel Stud M22*1.5*125	20
10	K131110201	1	Adjusting Washer	2
11	K131110301	1	Stop Washer	2
12	K131120301	1	Adjusting Nut	2
13	K131120302	1	Axle Locknut	2
14	K131130103	1	Axle Stop Cover	2
15	K131151302AWP	1	Hub - 10 x 285 PCD - including Pole Ring	2
16	K131140124A	1	Blank Hub Cap (K131140124H - HUB0)	2
17	K131161302	1	Brake Drum - 10 x 285 PCD	2
18	K131170101	1	Hub Seal (Φ108)	2
19	K131180101	1	Spider Supporting Roller	4
20	K131190101	1	Spider Supporting Bush	4
22	K131210101	1	Dust Cover	2
25	K1328501	1	Axle beam – 11.5t -127mm - 10 stud 285PCD	1
25	K1333501	1	Axle beam – 11.5t – 127mm – 10 stud 335PCD	1
	K131230265	1	Nameplate	1
27	K131290101	1	Washer Φ38.5	2
28	K131301011	1	Auto Slack Adjuster (10 splines)	2
29	K131290102	1	Washer Φ41.7	4
31	K131290106	1	Cam Tube Washer	2
33	K131320302	1	Camshaft Bush	4
32	K131480102	1	Cam Tube and bracket	2
34	K131170201	1	Camshaft Oil Seal	2
35	K131290201	1	Long Washer	2
38	K134502021	1	Pole Ring	2
39	K134502022	1	ABS Sensor	2
40	K134502016	1	ABS Bracket	2
41	K134502023	1	ABS Bottom Bracket	2
B1	K13B101001	1	Bearing HM518445/10	4
B2	K13B103001	1	O Ring Φ150*5.3 - Hub Cap	2
B4	K13B105001	1	Stud M8*16	12
B6	K13B105002	1	Stud M10*30	8
B7	K13B107001	1	Nut M10	8
B9	K13B108001	1	Circlip 38	2
B10	K13B108002	1	Circlip 42	2
B11	K13B103002	1	O Ring Φ39.7*3.55	2
B12	K13B105004	1	Stud M6*12	4
B13	K13B105003	1	Spring Washer 6	4
15	1151303A	1	Hub Assy 10x335 PCD	2
17	1161303A	1	Brake Drum 10x335 PCD	2
17	1161364	1	Brake Drum 5 Spoke	2
Tool	ACC5963900		Kedi Hub Cap Socket	

3317000501
Complete ABS Replacement Kit
Kedi Axle (Both Sides)

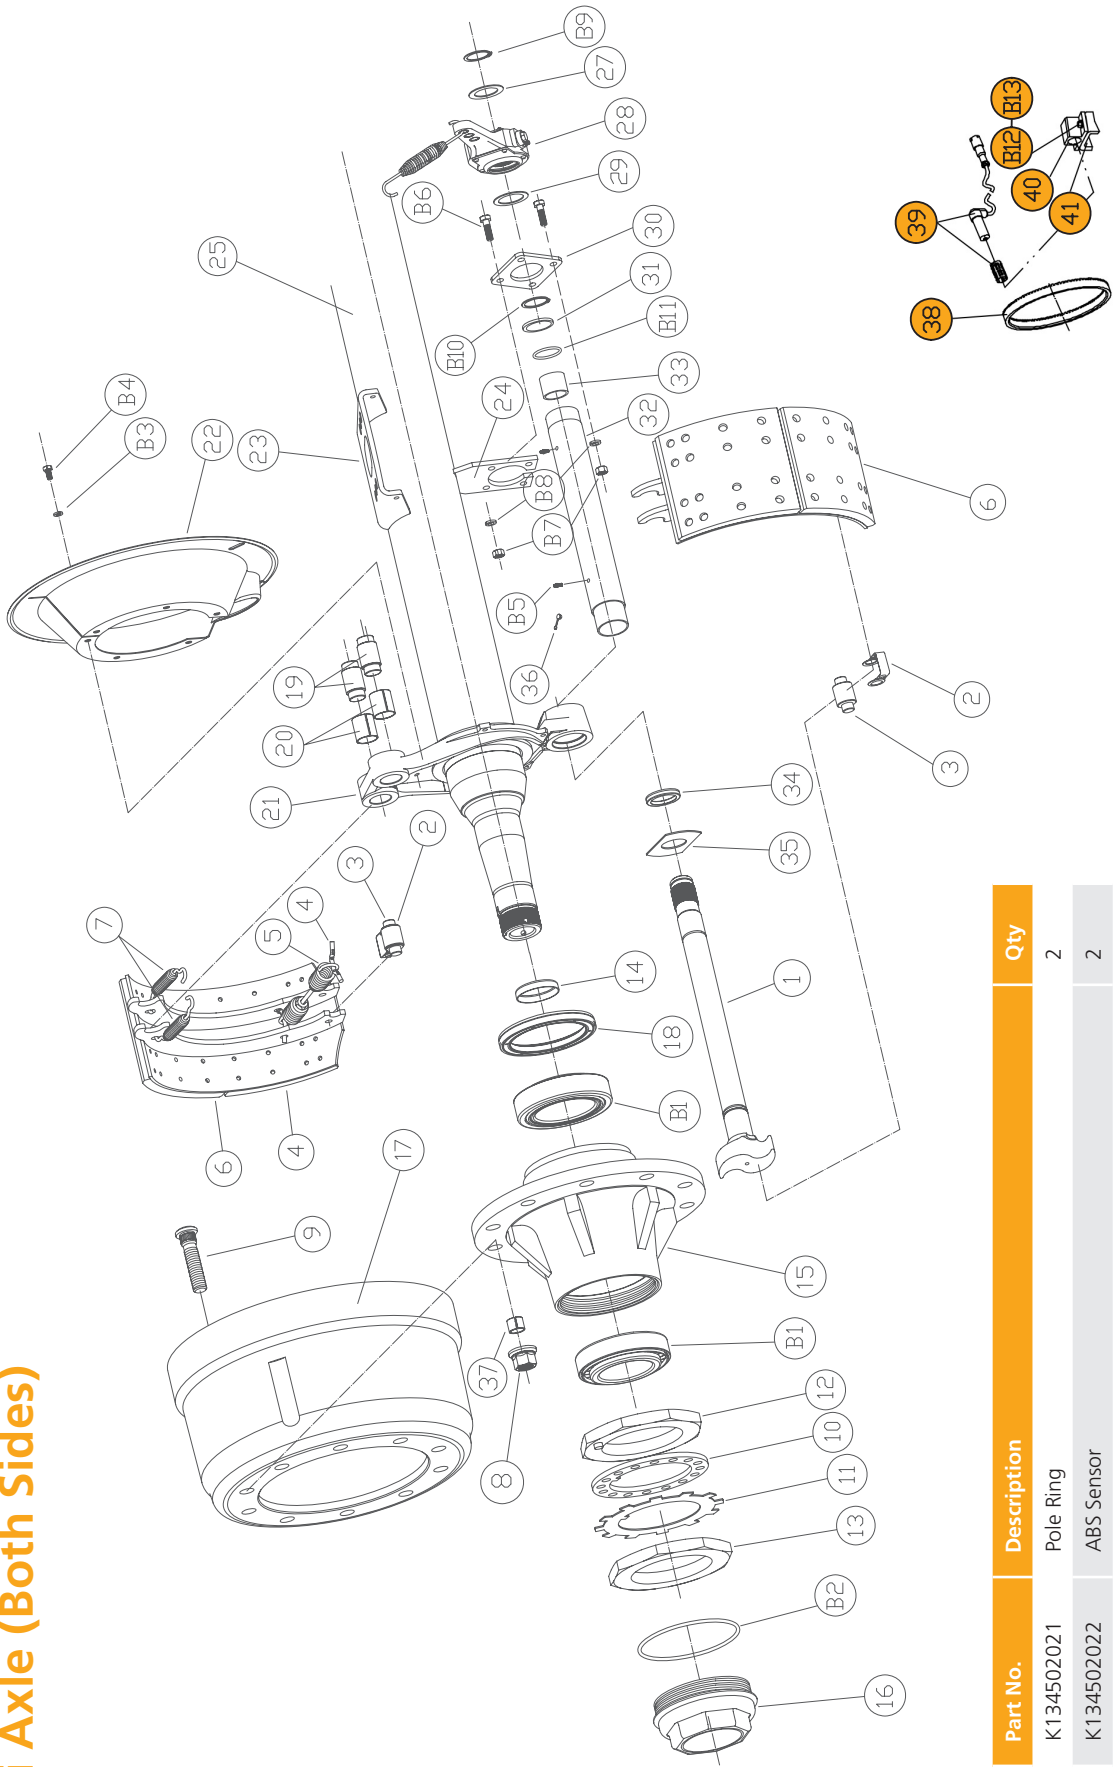


Item	Part No.	Description	Qty
38	K134502021	Pole Ring	2
39	K134502022	ABS Sensor	2
40	K134502016	ABS Bracket	2
41	K134502023	ABS Bottom Bracket	2
B12	K13B105004	Stud M6*12	4
B13	K13B105003	Spring Washer 6	4

3317000502


Complete Brake Shoe Replacement Kit

Kedi Axle (Both Sides)

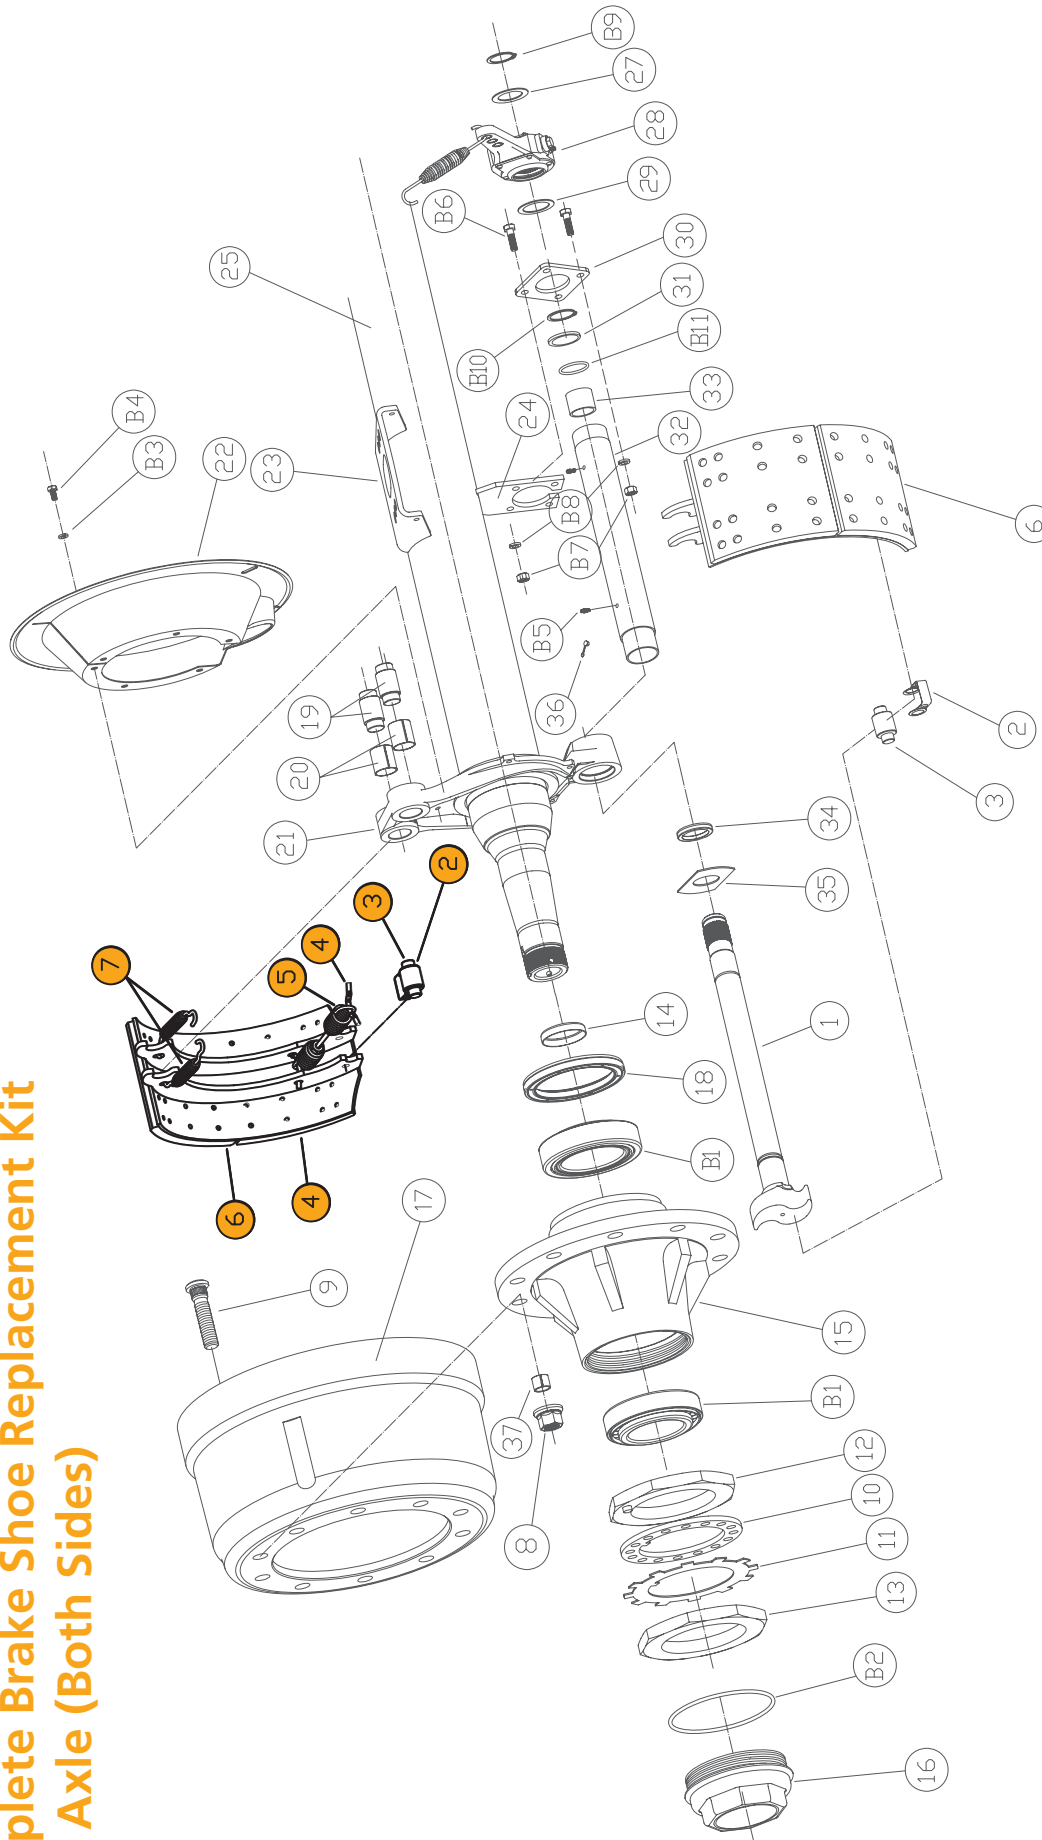


Item	Part No.	Description	Qty
2	K131020101	Retainer Roller	4
3	K131030101	Brake Shoe Roller	4
4	K131040101	Pin Return Spring	4
5	K131050101	Heavy Duty Return Spring	2
6	K131060101K	Brake Shoe Assembly 420*180 (MB21 Carlisle Brake Lining)	4
7	K131070101	Anchor Pin Spring	4

3317000503
Complete Dust Cover Replacement Kit
Kedi Axle (Both Sides)

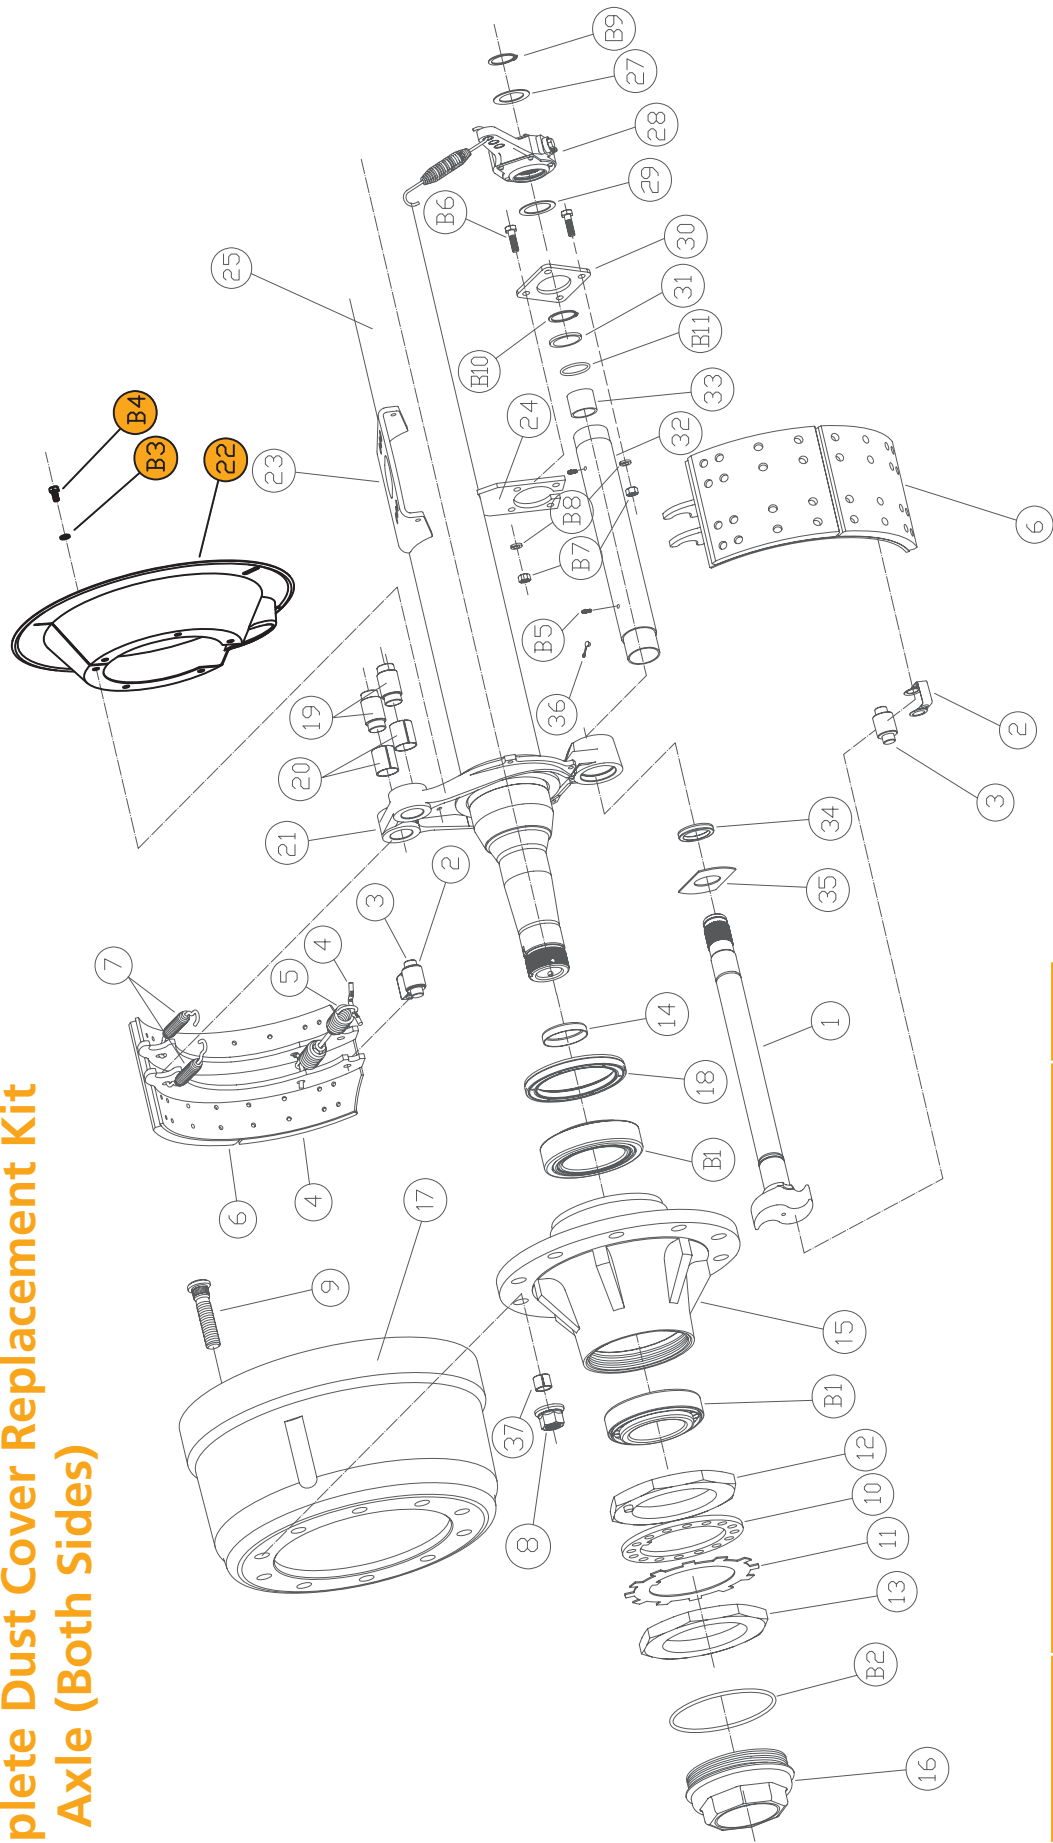


Item	Part No.	Description	Qty
22	K131210101	Dust Cover	2
B3	K134502018	Spring Washer 8	12
B4	K13B105001	Stud M8*16	12

3317000504
Complete Hub Cap Replacement Kit
Kedi Axle (Both Sides)

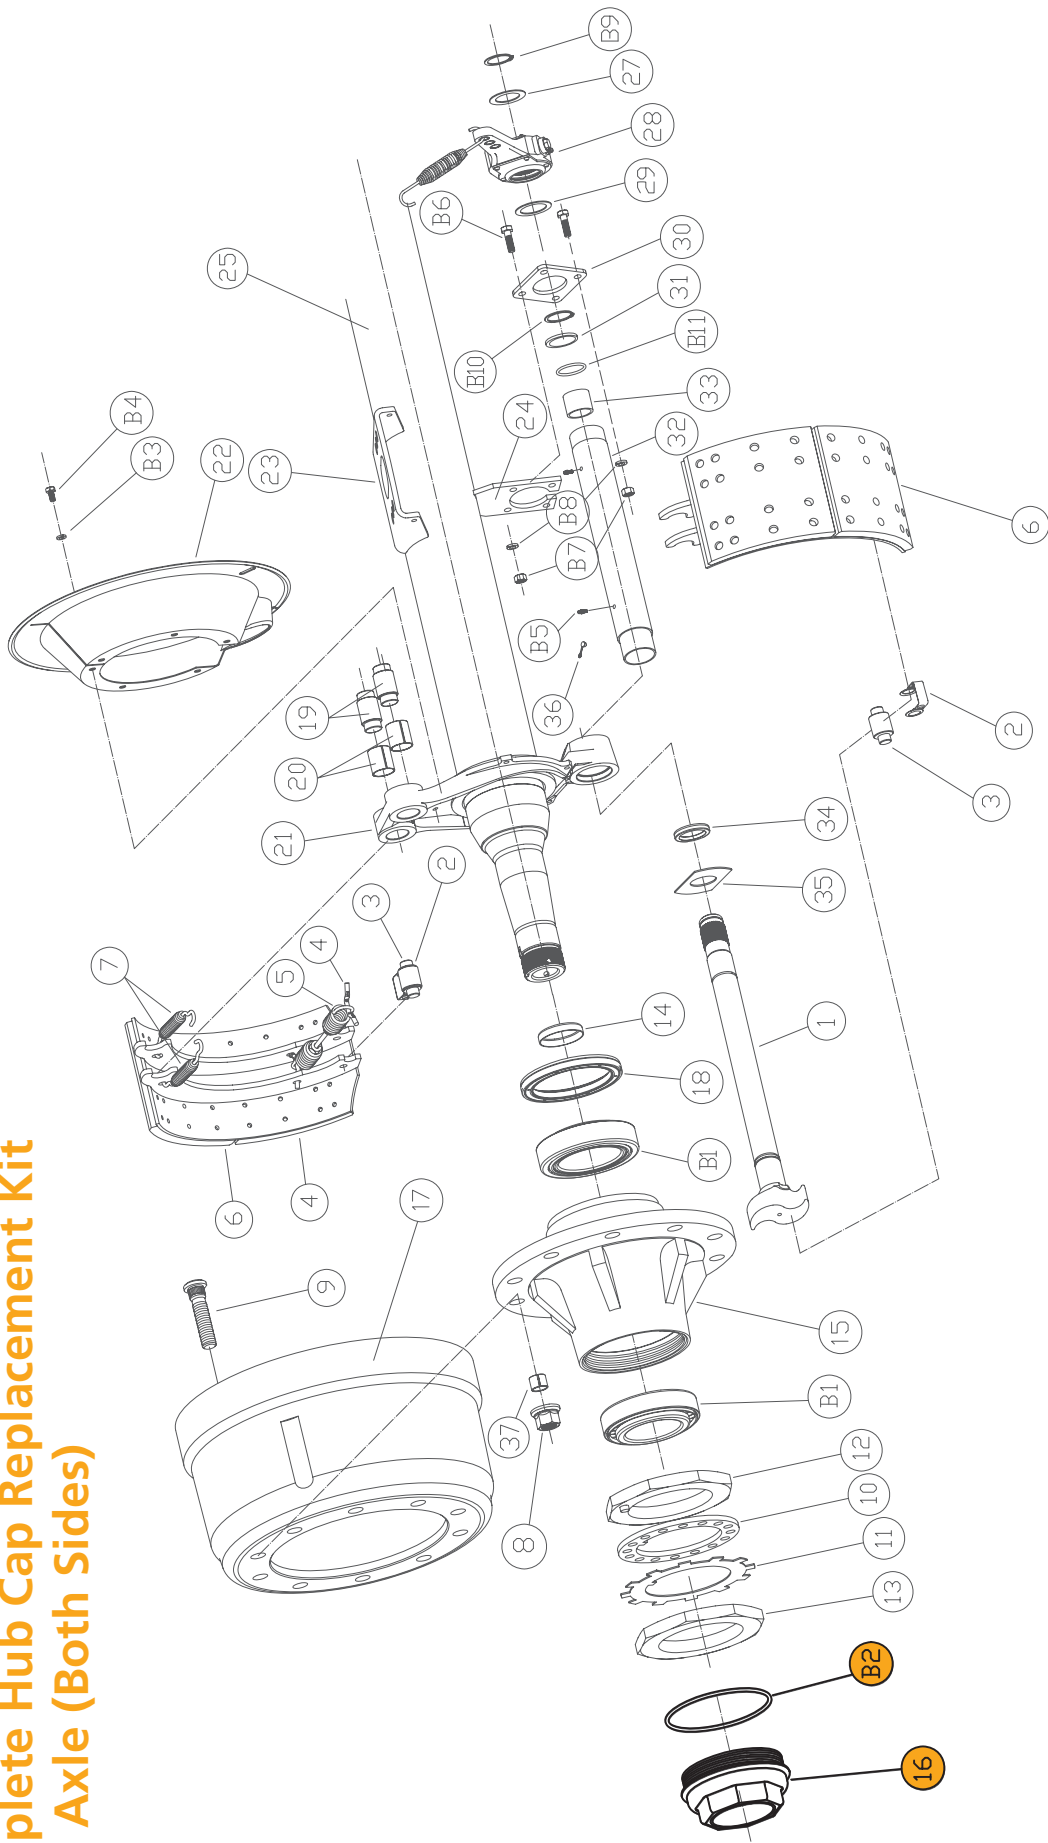


Item	Part No.	Description	Qty
16	K131140124A	Blank Hub Cap (K131140124H - HUB0)	2
B2	K13B103001	O Ring $\phi 150 \times 5.3$ - Hub Cap	2

3317000505
Complete Bearing & Seal Replacement Kit
Kedi Axle (Both Sides)

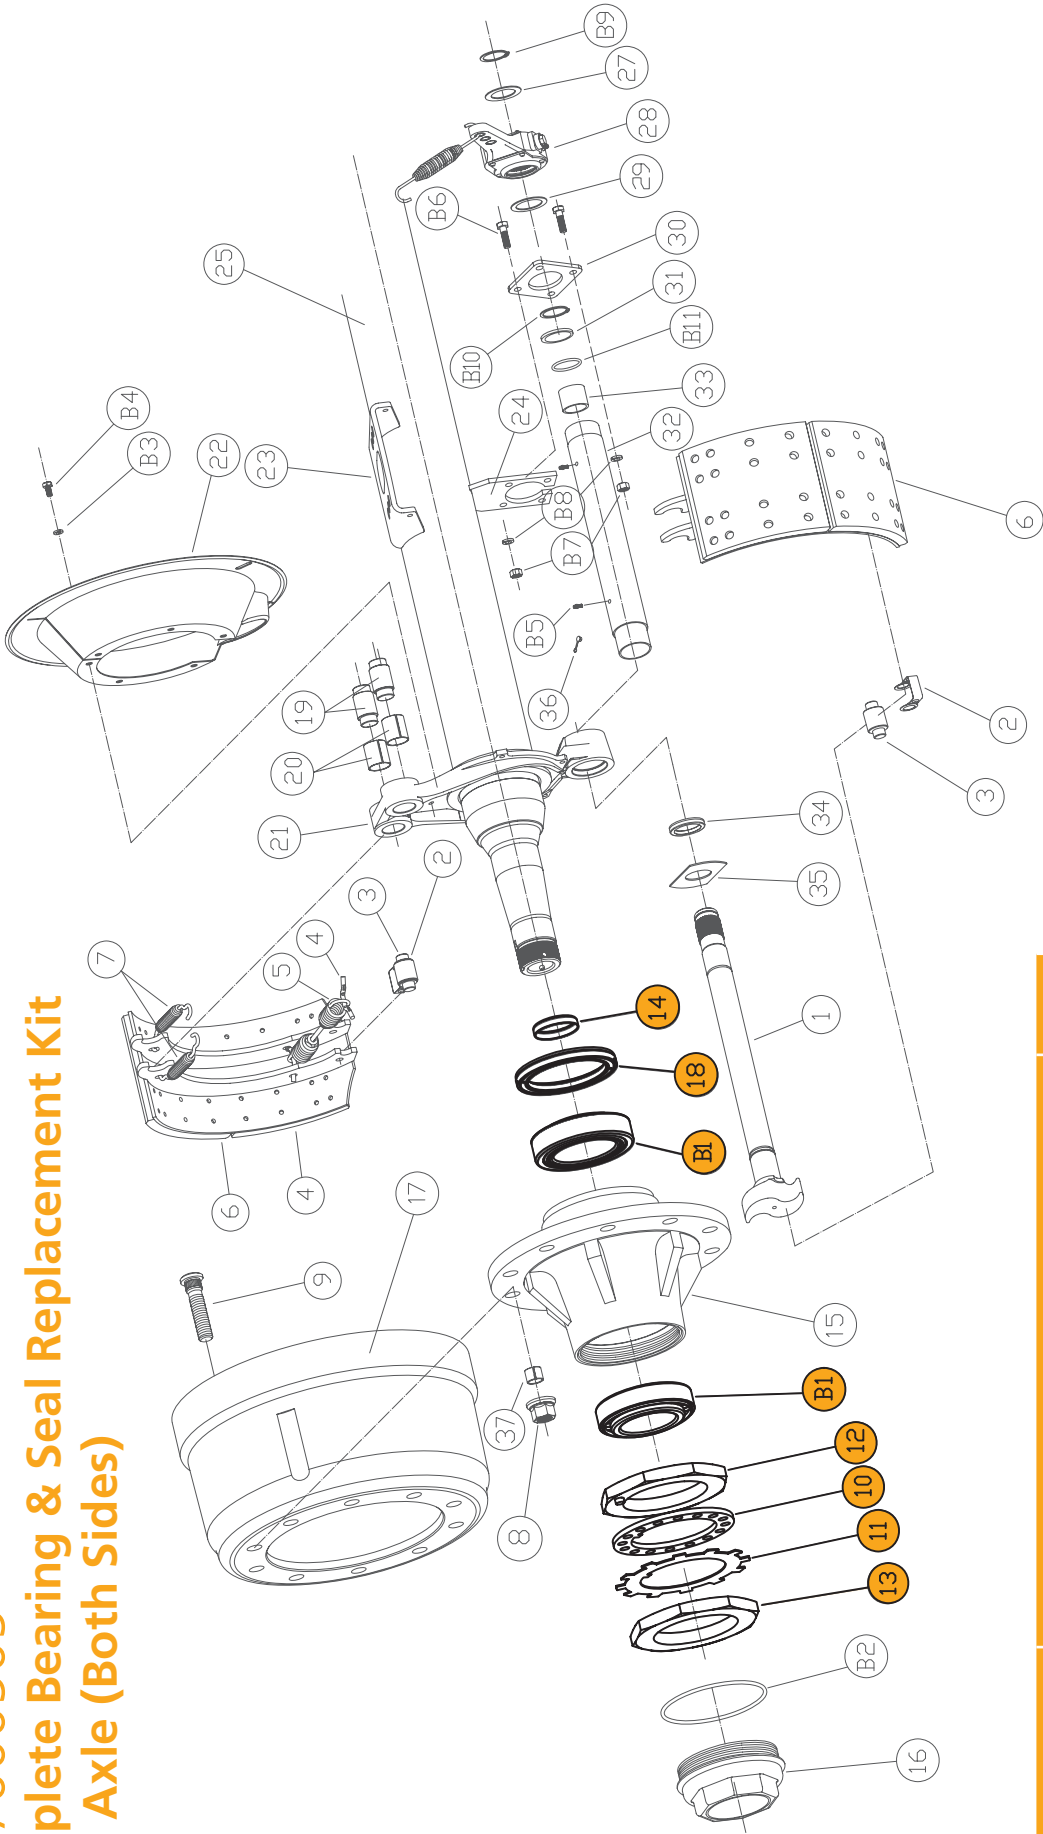


Item	Part No.	Description	Qty
13	K131120302	Axle Locknut	2
11	K131110301	Stop Washer	2
10	K131110201	Adjusting Washer	2
12	K131120301	Adjusting Nut	2
B1	K13B101001	Bearing HM518445/10	4
18	K131170101	Hub Seal (Φ108)	2
14	K131130103	Axle Stop Cover	2

3317000507
Complete Wheel Stud Replacement Kit
Kedi Axle (Both Sides)

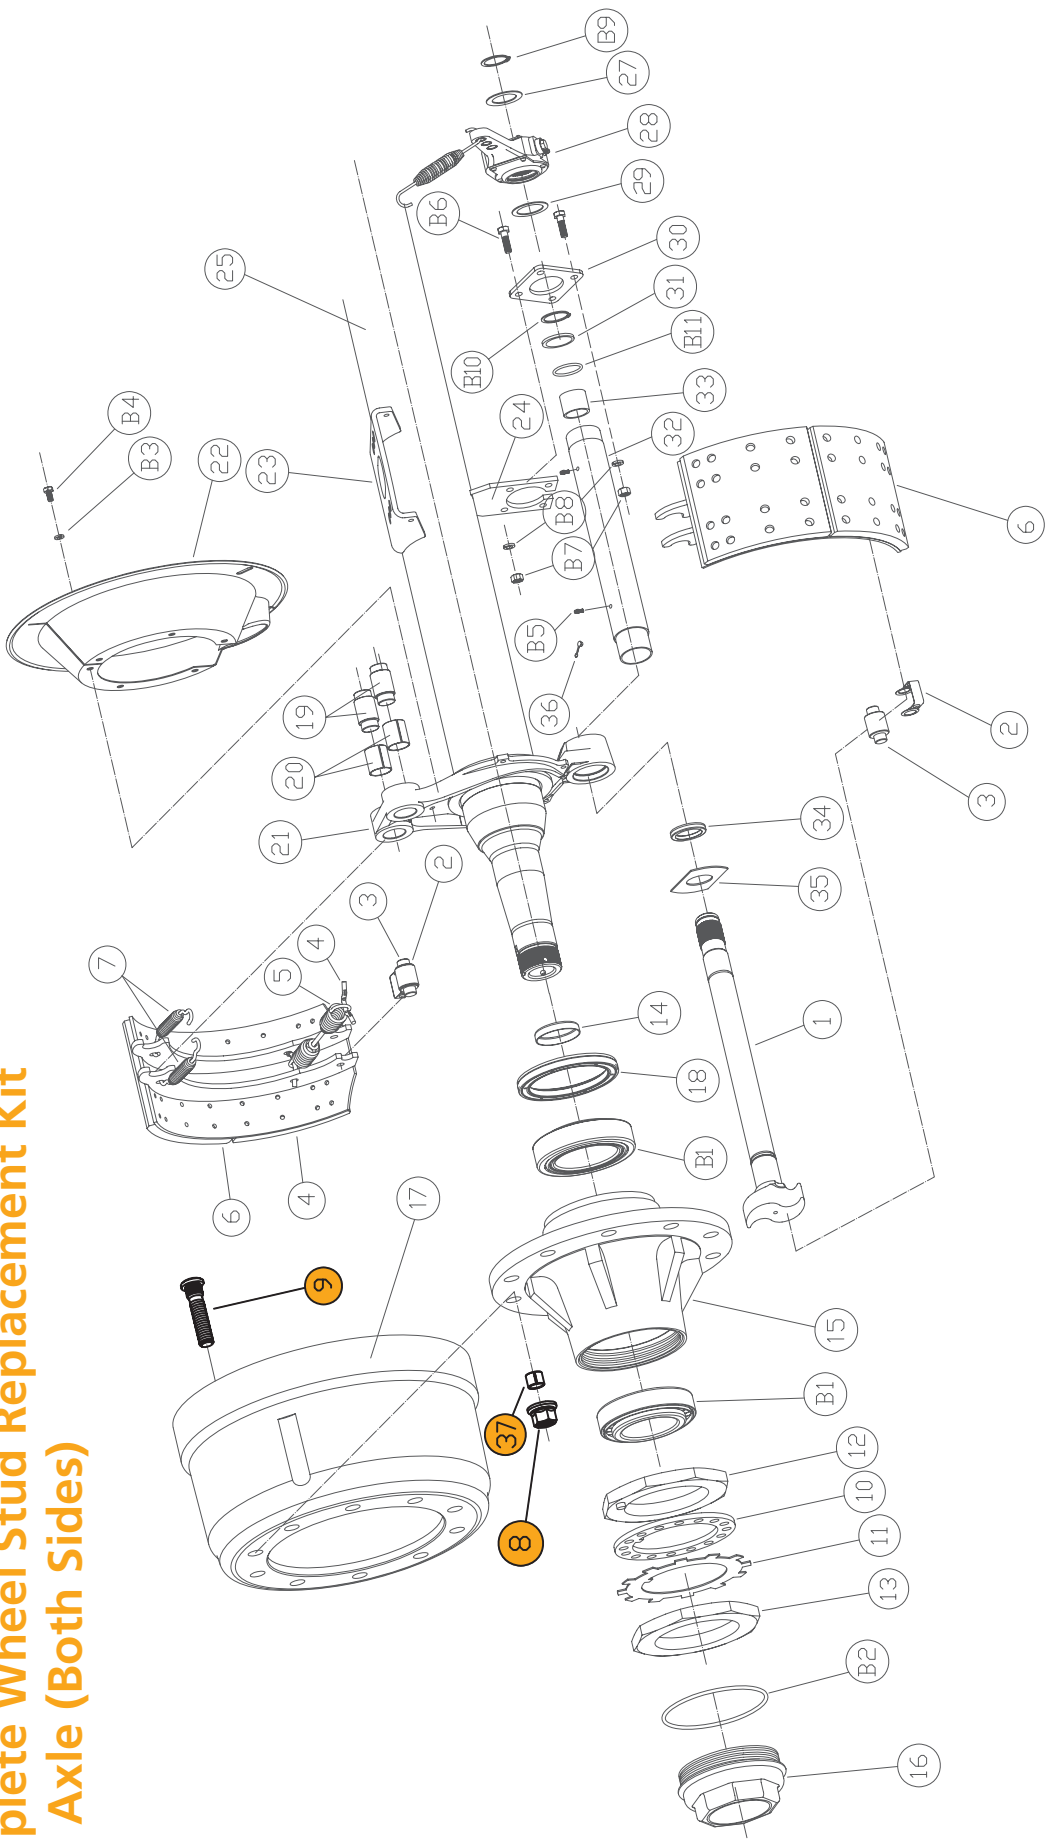

Item	Part No.	Description	Qty
8	K131090101	Flange Nut M22*1.5	20
37	K131270101	Bush	4
9	K131100206	Wheel Stud M22*1.5*125	20

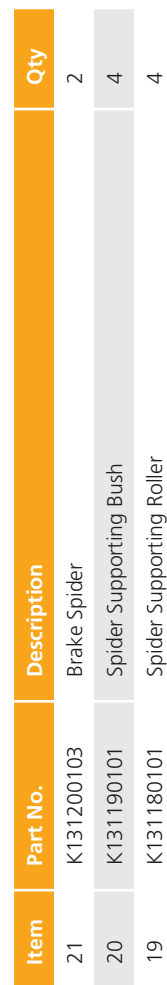



TRAILER AXLES AND
SUSPENSION SYSTEMS



COUPLING AND LIFTING
TECHNOLOGIES



SUSPENSIONS FOR
TRUCKS AND BUSES



SUSPENSIONS AND COMPONENTS
FOR COMMERCIAL VEHICLES



BUS AIR SUSPENSION
SYSTEMS



COUPLING AND LIFTING
TECHNOLOGIES



TRAILER AXLES AND
SUSPENSION SYSTEMS

safholland.com.au

SAF-HOLLAND (Aust.) Pty. Ltd.
PO Box 63 · 115 High St · Melton Vic 3337
Tel: (03) 9971 7900 Fax: (03) 9743 6763

ABN: 79004371215
Sales: 1300 131 613
Email: sales@safholland.com.au
Web: www.safholland.com.au